RCM-PN

Touch panel to input, change and monitor data of PCON/ACON/SCON/ERC2/ROBONET



Features

1 Easy Input, Change and Monitor Data

Position data and parameter (user parameter) can be changed and position, speed and IO status can be monitored. Dialogue window help users using for the first time.


2 Three-color Back Light indicates the Status

In the normal status the back light is white and it turn to pink with error and to red with emergency.


3 Connecting multiple Controllers

Up to 16 controllers of PCON, ACON, SCON, ERC2 or ROBONET can be connected.

The diagram shows only serial communication connection. Please refer to the manual for power supply and emergency.

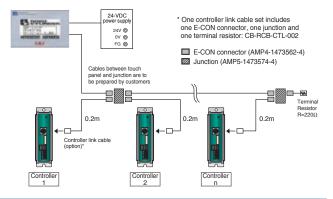

External Dimensions

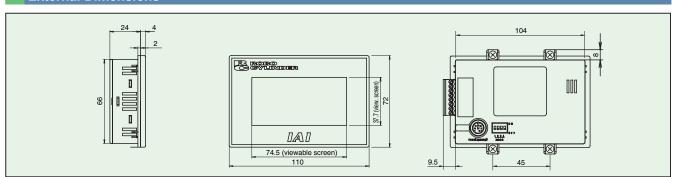

Specification Table

| | Item | RCM-PM-01 |
|-----------------------|--------------------------------|--|
| Bascic specifications | Power supply voltage | DC 24V |
| | Functional voltage | DC 21.6~26.4V |
| | Power capacity | less than 2W (less than 80mA) |
| | Ambient temperature / humidity | 0~50°C / 20~85% RH (non-condensing) |
| | Environment | IP65 (initial stage) only from front side |
| | Weight | ca. 160g |
| Communication | Communication standard | RS485 |
| | Communication condition | Transmit speed 115.2 kbps, Data bit 8 bit, no parity, Stop bit 1 bit |
| | Protocol | Modbus/RTU |
| | Controller to be connected | PCON/ACON/SCON/ERC2/ROBONET (max. 16 controllers can be connected) |
| Function | Monitor | Current position, speed, acceleration, error code, error message, PIO status bit, speed wave, current wave, current value |
| | Error list | max. 16 error lists (code, detail code, address, time, message) |
| | Position table edit | Position, speed, acceleration, band-width, push-mode, individual zone, incremental position, jog/inching, direct teaching, error message by non allowable data |
| | Move function | Position, direct movement, jog, screen jump function at error |
| | Parameter edit | Zone signal, software limit, PIO pattern selection, jog speed, inching distance, speed at push mode, safety speed |
| | Back light | White (standard), pink (error), red (emergency) |
| | View screen adjustment | Contrast and brightness adjustment |
| | Gateway monitor function | Current position (max. 4 axes), current speed (max. 4 axes), current level (max. 4 axes), total current level, error monitor for all axes, Gateway system status |